

Wish


BY

WE VIBE™

Wish by We-Vibe™

Pleasure you'll want to sink into. The soft exterior and rumbly vibrations of Wish by We-Vibe stimulate your vulva with deep sensations.


Control with your smartphone and get more features with the We-Connect™ app. we-vibe.com/app

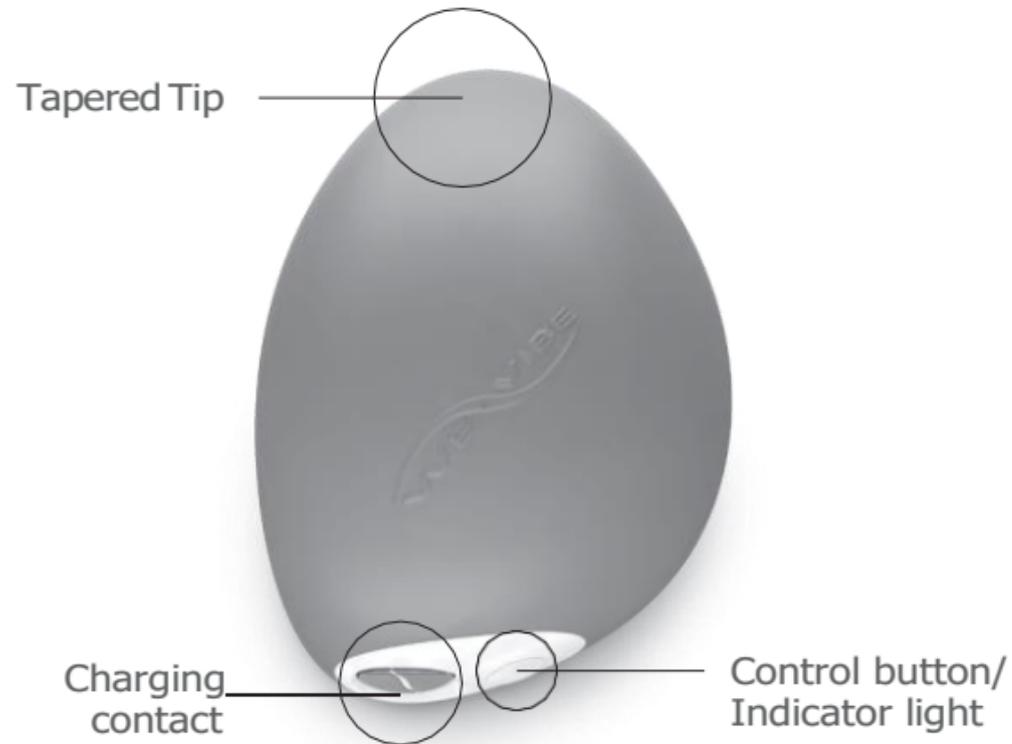

GETTING TO KNOW WISH

Press the control button to turn on and change the vibration modes.

Press and hold the control button for 2 seconds to turn off your Wish.

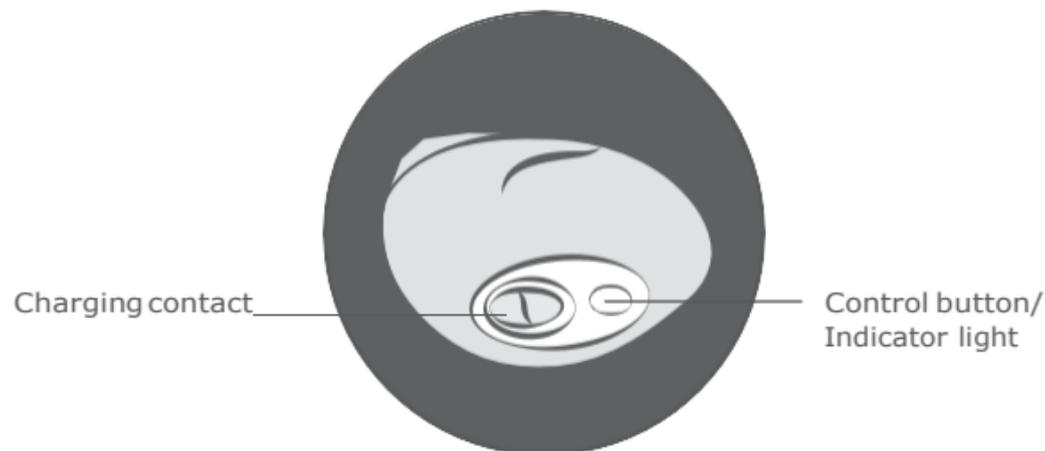

GETTING STARTED

1. Charge for 90 minutes before first use. Attach the charging cable to the magnetic charging contact. The cable can then be plugged into any USB port or USB/AC power adapter (not included).

Indicator light fast blink: Charging

Indicator light on: Fully charged


Indicator light off: No power, or charger is not properly placed

Indicator light slow blink: Low battery

2. Wash your Wish with We-Vibe™ Clean — made by pjur® or soap and water.

I NEED MORE HELP

- Check the frequently asked questions (FAQs) at we-vibe.com.
- Email us at care@we-vibe.com or complete the web form at we-vibe.com/contact.
- For information about replacement parts, visit we-vibe.com.

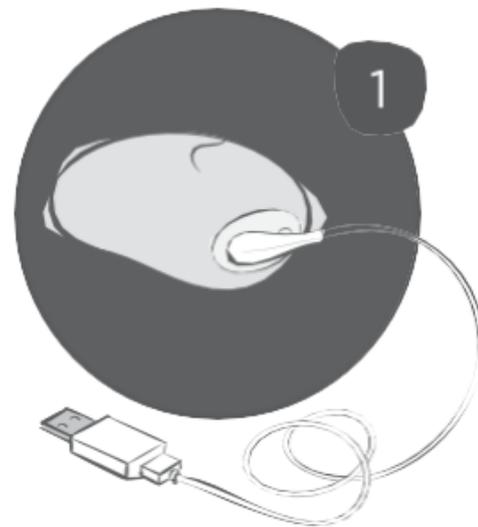

ENJOYING YOUR WISH

3. If you desire lubrication apply We-Vibe™ Lube — made by pjur® or other water-based lubricant. For more information on lubricants, visit we-vibe.com/lubes.

4. To turn on Wish, press the control button.



5. To change the vibration mode and to cycle through modes, press the control button.

6. Use all over your body for external stimulation (excluding throat area).

7. To turn off your Wish, press and hold the control button for 2 seconds. Or press it repeatedly to cycle through the vibration modes until you reach the off position.



VIBRATION MODES

PowerPulse™ Low



Cha-cha



PowerPulse™ Medium



Tease



PowerPulse™ High



Ramp



Pulse



Tempo



Wave



Massage



+ Create your own mode with the We-Connect™ app



We-Connect™

Get the We-Connect app on the App Store® or Google Play™.

We-Connect™

The app that brings couples together.™ Only with We-Vibe®

Touch. Tease. Turn on.

You can get even more features when you pair Wish with your smartphone and the free We-Connect app. Get touchscreen control, the ability to create custom vibrations, and you can even connect and play with your partner from anywhere in the world.

How to pair and connect:


Download the We-Connect app on your smartphone.

Open the app and follow the on-screen pairing instructions.

Once paired, send your lover an invite to connect in the app.

APP QUESTIONS?

- For a list of supported devices, see we-vibe.com/app
- For We-Connect app support, go to we-vibe.com/app-support

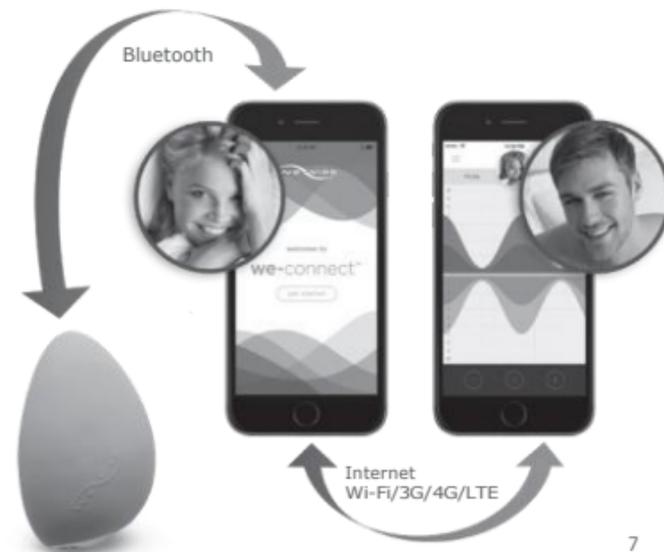

VIBRATOR CHARGING

- Wash and fully dry your Wish before recharging it.
- When Wish is off the indicator light will blink slowly every 10 seconds if the battery is low and needs recharging.
- When you turn Wish off after use, the indicator light will blink quickly for 5 seconds if the battery is low and needs recharging before next use.
- Plug the cable into a USB power adapter or USB port (1 amp or greater).
- When a computer USB port is used, Wish will not charge if your computer goes into sleep mode.
- When the Wish charger is placed correctly and connected to a power source the indicator light will blink every few seconds.
- Charge for 90 minutes for up to 2 hours of pleasure. A full charge may take up to 2 hours.
- If Wish has been without a charge for an extended period of time the charging light may take several minutes to turn on.
- When fully charged the light will become solid.
- Wish operates for up to 2 hours on a full charge, depending on the vibration mode. Modes with higher vibration speeds drain the battery faster.
- There's no need to drain the battery before recharging.
- A charge is maintained for several months but will continually diminish over time. For best performance and long battery life, recharge before vibrations weaken noticeably.
- Wish will not charge if it is too hot (+45° C). The indicator light on the charger will blink

once every 5 seconds until the temperature reaches a safe level. At that point, charging will begin automatically.

CLEANING AND STORAGE

- Clean with We-Vibe Clean™ — made by pjur¹ or gentle soap and water before and after every use.
- Keep away from extreme heat or cold.

DO NOT

- Do not use with silicone-based lubricants because they will damage the product. For more information on lubricants, visit we-vibe.com/lubes.
- Do not clean with products that contain alcohol, petrol or acetone.
- Do not boil, bake, microwave or put Rave in a dishwasher.
- Do not store in extreme temperatures.
- Do not use a USB hub that is also charging other devices.
- Do not charge near water.

PRODUCT SPECIFICATIONS

- Wish battery: Lithium ion
- Run time: Up to 2 hours
- Charging: USB
- Materials: Body-safe silicone made without phthalates, BPA or natural rubber latex.
- 100% waterproof
- Charging time: Maximum 2 hours

WARRANTY

The one-year warranty covers product replacement for manufacturing defects only. Visit we-vibe.com/warranty for product replacement and warranty information. No other warranties are expressed or implied. If there is a warranty claim, or any other damage, the user's sole remedy is product replacement. No medical claims are implied or warranted by use of this product.

COMPLIANCE

Wish by We-Vibe™ device is rated for indoor use from +10° C to +45° C.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with Health Canada's Safety Code. The installer of this device should ensure that RF radiation is not emitted in excess of the Health Canada's requirement.

This product is in compliance with the essential requirements of Directives 2006/95/EC, 2004/108/EC, 2011/65/EU and 1999/5/EC.

Wish by We-Vibe™ vibrator: Model 1000-03. Contains: FCC ID: ZUE1000, IC: 9804A-1000

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For further compliance information, consult we-vibe.com/support/regulatory-compliance.



RESPONSIBLE DISPOSAL

The crossed-out wheeled bin on the product indicates that this product should not be treated as household waste. Electrical and electronic equipment contain hazardous substances that can be harmful to the environment and human health if not disposed of properly. To reduce the impact on the environment, we encourage you to use the appropriate take-back systems when the product has reached end of life. Please contact your local or regional waste administration for details.

Contact us for more information on the environmental performance of our products.

WARNING

Sold as an adult novelty only; not for medical use. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities. To avoid electric shock, do not use charger near water. Do not use on swollen or inflamed areas of skin. Discontinue use if discomfort occurs. Do not use on neck area.

Designed and developed by Standard Innovation® Corporation, Canada. Made in China.

© 2016 Standard Innovation® Corporation

We-Vibe and We-Vibe logo are trademarks of Standard Innovation® Corporation.

For information regarding patents, designs and pending patent and design applications in the United States, Canada, Europe, Australia, Brazil, China, Hong Kong, India, Japan, Mexico and Russia, see we-vibe.com/patents.

CUSTOMER CARE

+1-613-828-6678

+1-855-258-6678 (U.S. & Canada)


care@we-vibe.com

we-vibe.com

Wish by We-Vibe™

En njutning som du kommer att vilja hänge dig åt. Den sammetslena ytan och de underbara vibrationerna från Wish by We-Vibe stimulerar ditt sköte och ger en djup känsla.


Styr med din smartphone och få ännu fler funktioner med appen We-Connect™. we-vibe.com/app

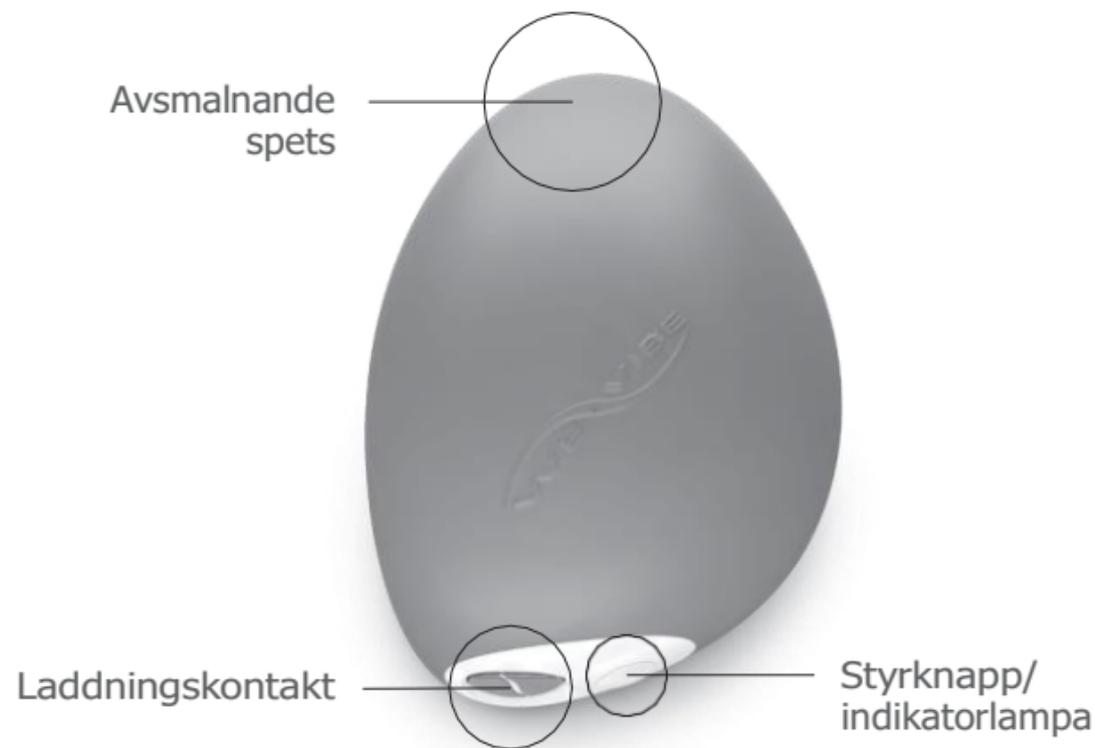

LÄRA KÄNNA WISH

Tryck på styrknappen, när du vill slå på och ändra vibrationslägena.

Tryck och håll ner styrknappen i 2 sekunder när du vill stänga av din Wish.

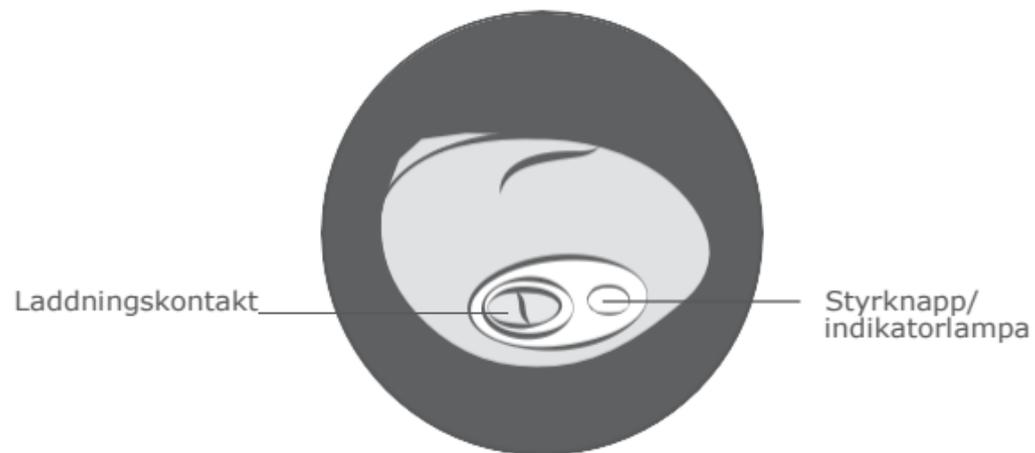

62

KOMMA IGÅNG

1. Ladda i 90 minuter före första användning. Anslut laddningskabeln till den magnetiska laddningskontakten. Kabeln kansätts in i valfri USB-port eller USB/AC-adapter (Medföljer inte).

Snabbt blinkande ljus: laddning pågår

Fast ljus: helt uppladdad


Ljuset släckt: ingen nätspänning eller så är laddaren felinsatt

Långsamt blinkande ljus: låg batterinivå

2. Tvätta din Wish med We-Vibe™ Clean — made by pjur® eller tvål och vatten.

JAG BEHÖVER MER HJÄLP

- Kolla Vanliga frågor (FAQ) på we-vibe.com.
- Sänd ett e-postmeddelande till care@we-vibe.com eller fyll i nätformuläret på we-vibe.com/contact.
- Om du vill veta mer om reservdelar kan du gå till we-vibe.com.

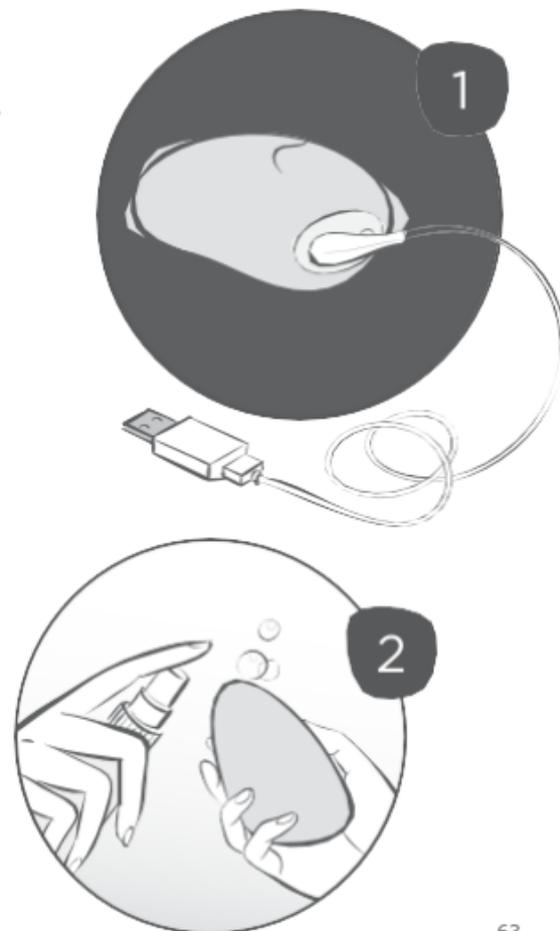

63

FÅ UT DET BÄSTA AV DIN WISH

3. Om du behöver glidmedel använd We-Vibe™ Lube — made by pjur® eller något annat vattenbaserat glidmedel. Om du vill veta mer om glidmedel, går du in på we-vibe.com/lubes.

4. När du ska slå på Wish, trycker du på styrknappen.



5. När du vill ändra vibrationsläge eller genomlöpa lägen, trycker du på styrknappen.

6. Använd läget för hela kroppen när du vill ha yttre stimulering, dock ej området kring halsen.

7. När du vill stänga av din Wish, håller du styrknappen intryckt i 2 sekunder. Eller också trycker du på den upprepade gånger och genomlöper vibrationslägena tills du kommer till avstängningsläget.



VIBRATIONSLÄGEN

PowerPulse™ Låg



Cha-cha




PowerPulse™ Mellan



Locka



PowerPulse™ Hög



Ramp



Pulsering



Tempo



Våg



Massage



+ Skapa ditt eget läge med hjälp av appen We-Connect™



We-Connect™

Hämta appen We-Connect
på App Store® eller Google Play™.

We-Connect™

Appen som sammanför älskande par.™ Bara med We-Vibe®

Smek. Locka. Tänd.

Du kan få tillgång till ännu fler funktioner genom att para ihop Wish med din smartphone och gratisappen We-Connect. Du får pekskärmsstyrning och möjlighet att anpassa egna vibrationer, och du kan till och med leka med din partner från varsomhelst i världen.

Hur man parar ihop och kopplar upp sig:


Ladda ner appen We-Connect till din smartphone.

Öppna appen och följ skärmanvisningarna för att para ihop.

När du har parat ihop skickar du din partner en inbjudan att koppla upp från appen.

FRÅGOR OM APPEN?

- Se listan över understödda enheter enligt we-vibe.com/app
- Om du behöver hjälp i anslutning till appen We-Connect går du till we-vibe.com/app-support

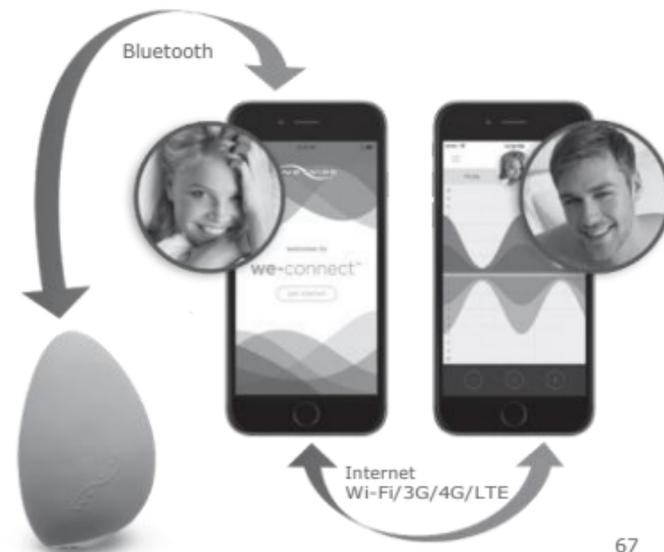

LADDNING AV VIBRATORN

- Tvätta och torka din Wish helt innan du laddar om den.
- När Wish är avstängd blinkar indikatorlampan långsamt var 10:e sekund, om batterinivån är låg och batteriet behöver laddas upp.
- När du stänger av Wish efter avslutad användning blinkar indikatorlampan snabbt var 5:e sekund, om batterinivån är låg och batteriet behöver laddas upp inför nästa användning.
- Sätt in kabeln i en usb-adapter eller usb-port (1 ampere eller mer).
- När en usb-port på en dator används, laddas inte din Wish om din dator går över i viloläge.
- När laddaren till Wish är rätt insatt och rätt inkopplad till nätspänning blinkar indikatorlampan med några sekunders mellanrum.
- Ladda i 90 minuter för upp till 2 timmars användning. En fullständig uppladdning kan ta upp till 2 timmar.
- Om Wish inte har laddats upp på länge kan det ta flera minuter innan indikeringslampan tänds.
- När uppladdningen är helt färdig slår ljuset om till fast sken.
- Din Wish går upp till 2 timmar på en fullständig laddning beroende på vilket vibrationsläge som används. Vid högre vibrationshastigheter urladdas batteriet snabbare.
- Batteriet behöver inte laddas ur helt före omladdning.
- En laddning kan hålla i flera månader men försvagas efterhand. För att erhålla bästa funktion och batterilivslängd bör du ladda om när du märker att vibrationerna börjar minska.
- Din Wish laddas inte, om det är för varmt (+45 C). LED-ljuset på laddaren blinkar var 5:e sekund till dess temperaturen sjunker till en säker nivå. Då startar laddningen automatiskt.

RENGÖRING OCH FÖRVARING

- Rengör med We-Vibe Clean™ – made by pjur® eller mild tvål och vatten före och efter varje användning.
- Undvik extrem värme eller kyla.

OBS!

- Använd inte enheten tillsammans med silkonglidmedel eftersom det skadar den.
Om du vill veta mer om glidmedel, gå du in på we-vibe.com/lubes.
- Rengör inte enheten med produkter som innehåller alkohol, bensin eller acetone.
- Utsätt inte Wish för kokning eller uppvärmning i vanlig ugn, mikrovågsugn eller diskmaskin.
- Förvara inte i extrema temperaturer.
- Använd inte en USB-hubb som laddar andra enheter samtidigt.
- Använd inte laddaren i närheten av vatten.

PRODUKTBESKRIVNING

- Wish-batteri: litiumjon
- Aktiv körtid: upp till 2 timmar
- Laddning: USB
- Material: kroppssäker silikon tillverkad utan ftalater, BPA eller latex
- 100% vattentät
- Laddtid: max 2 timmar

GARANTI

Den ettåriga garantin avser endast utbyte av produkten i fall av tillverkningsfel. Gå in på we-vibe.com/warranty om du vill byta ut produkten och få mer information om garantin.

Det finns inga ytterligare uttryckliga eller underförstådda garantier. Om garantin åberopas eller om någon skada skulle uppkomma, är utbyte av produkten det enda rättsmedlet.

Användningen av produkten innebär inga uttryckliga eller underförstådda medicinska löften eller garantier.

GODKÄNNANDEN/FÖRENLIGHET

Enheten Wish by We-Vibe™ är märkt för inomhusbruk inom temperaturområdet +10 C till +45 C.

Denna klass B-digitala apparat är uppfyller kraven enligt kanadensiska ICES-003.

Enheten uppfyller kraven enligt FCC Del 15 och Industry Canada, 'license exempt RSS standard(s)'. För användningen gäller följande två villkor: (1) Enheten får inte orsaka skadliga störningar till omgivningen, (2) Enheten måste klara av alla slags störningar från omgivningen, även sådana som kan framkalla oavsiktlig igångkörning och drift.

Enheten uppfyller kraven enligt Säkerhetsföreskrifterna från Health Canada Safety Code. Installatören av denna enhet måste tillse att den inte utsänder mer radiovågor än vad som är förenligt med kraven enligt Health Canada.

Produkten är förenlig med huvudkraven enligt EU-direktiven 2006/95/EC, 2004/108/EC, 2011/65/EU och 1999/5/EC.

Wish by We-Vibe™ vibrator: modell 1000-03. Innehåller: FCC ID: ZUE1000, IC: 9804A-1000

Ändringar eller modifieringar som inte uttryckligen godkänts av den part som ansvarar för godkännande/ förenlighet kan medföra att användaren inte ska anses ha rätt att använda utrustningen Om du vill du veta mer om godkännanden/förenlighet, går du in på we-vibe.com/regulatory-compliance.



M51092 A01